


Jandy...Riverflow System Automation Wiring 2012

Locate an auxiliary relay and wire the Following:

Jandy.....To.....ABB Drive
Line One White.....# 10 24 Volts
Load One Yellow.....# 13 DI1

Jumper # 11 & # 12


Set ABB Keypad Function in Remote Mode

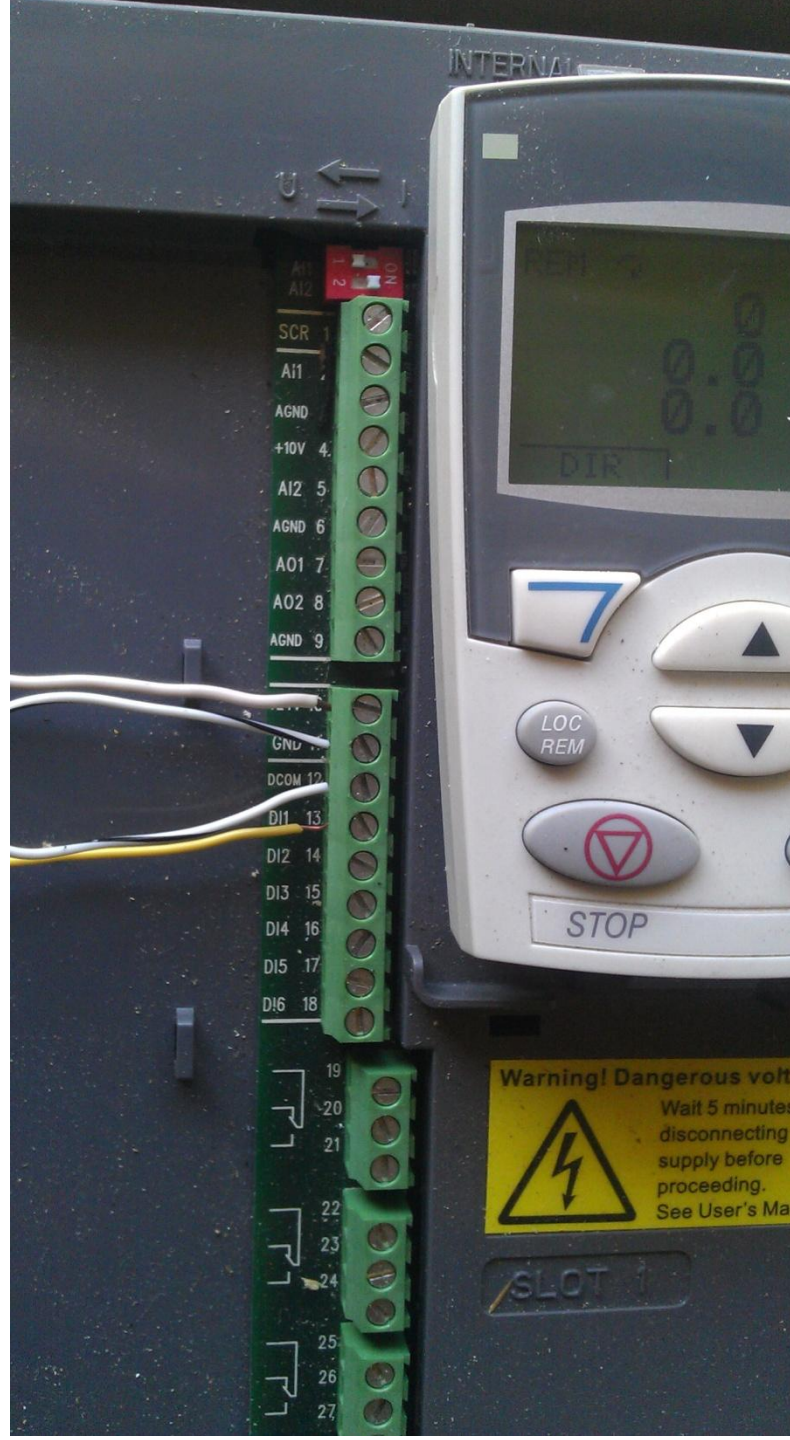

Jandy Aux Relay

White Wire Line One to
ABB Drive # 24 Volts

Yellow Wire Load One to
ABB Drive # 13 DI1

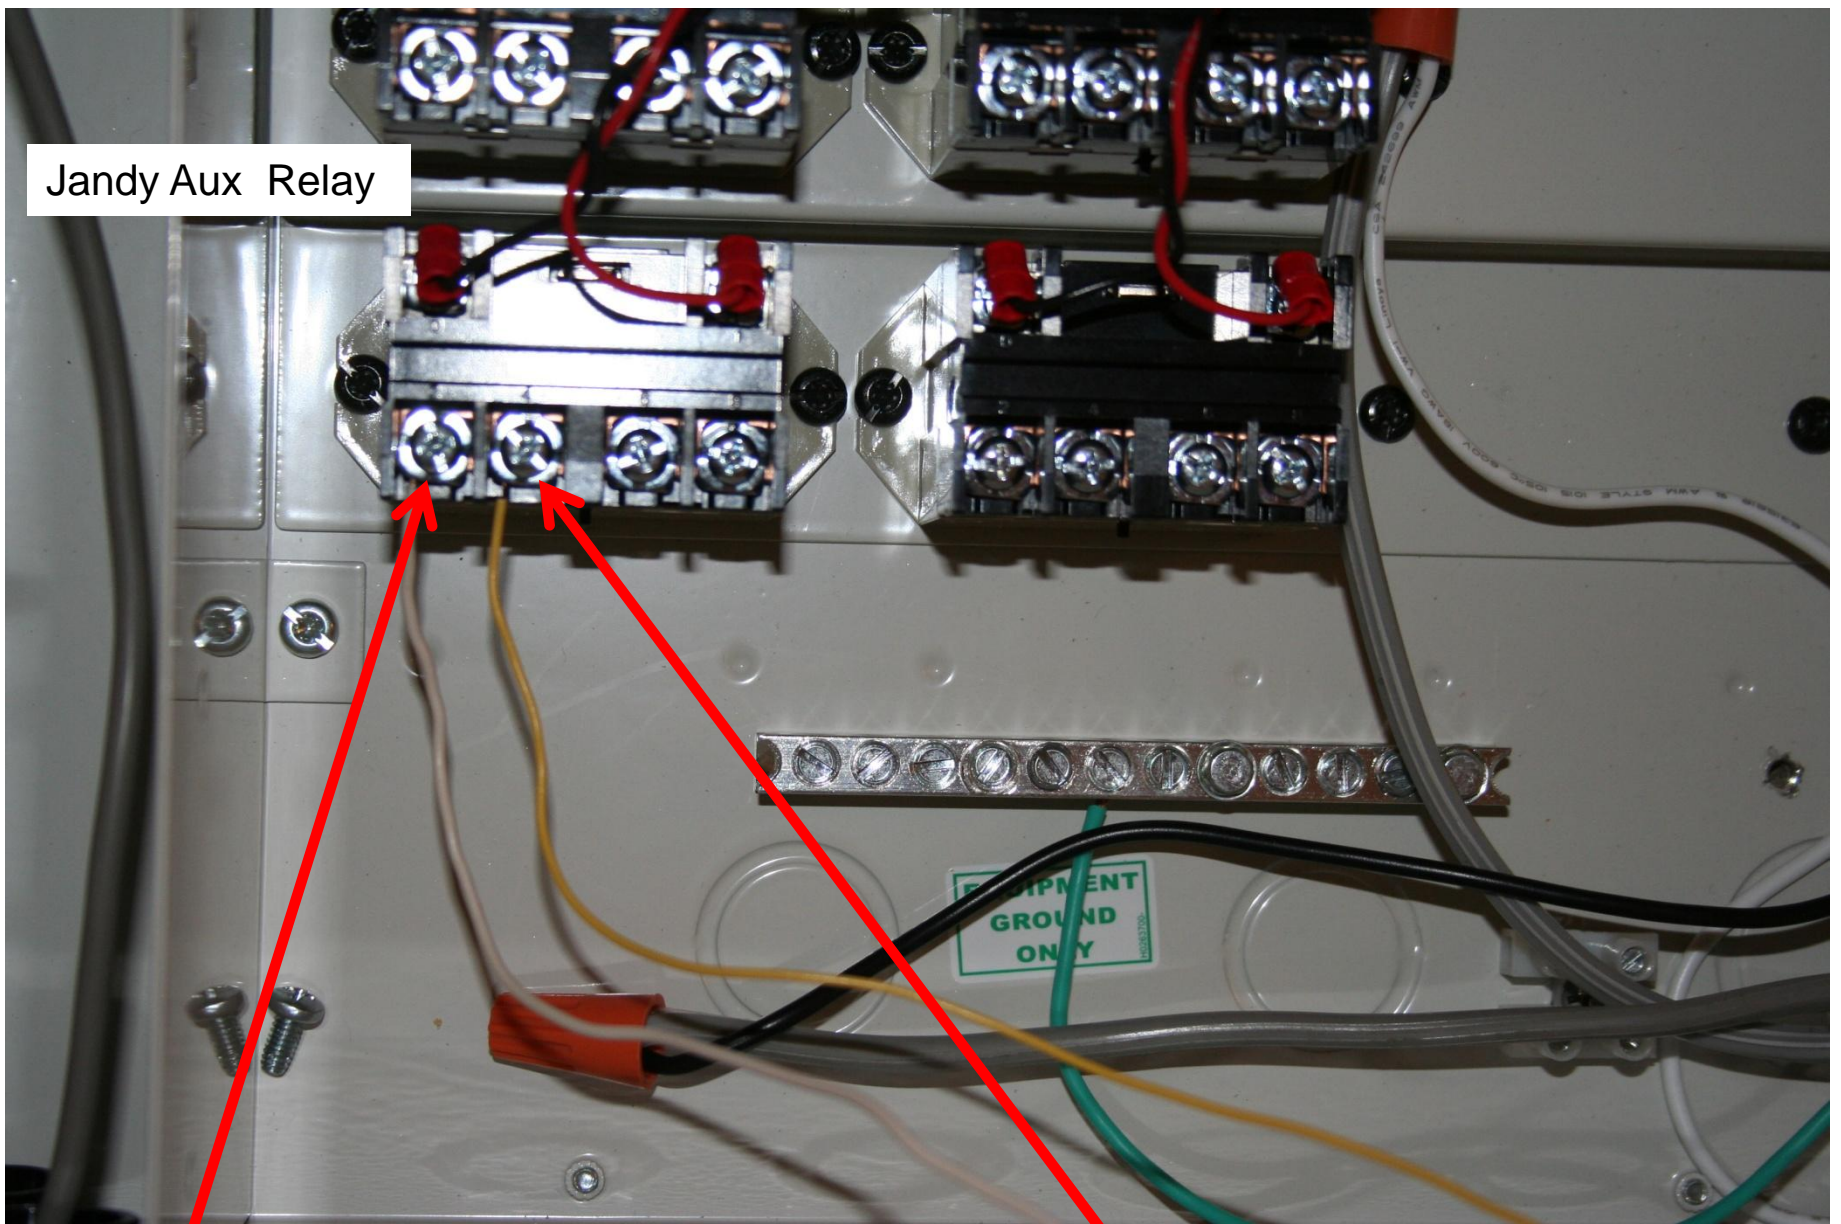

Low Voltage Raceway (do not run high voltage wire in this comp

